

MODEL SAMPLES

 **ADD THE MS TOUCHOSC LAYOUT TO IOS / ANDROID DEVICE:**

GO TO ITUNES - YOUR DEVICE - FILE SHARING - DRAG TOUCHOSC FILE IN THE TOUCHOSC APP (ITUNES)
ANDROID >>> [HTTPS://HEXLERNET/DOCS/TOUCHOSC-CONFIGURATION-LAYOUT-ADD-FROM-FILE](https://hexlernet/docs/touchosc-configuration-layout-add-from-file)

 **YOU CAN CONNECT TOUCHOSC BY USING OS X COREMIDI NETWORK
- BRIDGE - USB C OR CAMERA CONNECTION KIT (IOS!)***

[HTTPS://HEXLERNET/DOCS/TOUCHOSC-GETTING-STARTED](https://hexlernet/docs/touchosc-getting-started)


 **OPEN "MSL 1.02.TOUCHOSC" ON YOUR IPAD OR TABLET***

 **PLUG YOUR M:S TO PC/MAC (IF YOU WANT TO USE IPAD AS A WIRELESS CONTROLLER)
WE RECOMMEND USING USB C PORT OR CAMERA CONNECTION (LOW LATENCY)**

 **CONFIGURE YOUR MIDI STUDIO (OSX)**


 **SET YOUR **M**ODEL **S**AMPLES (MANUAL PAGE 7)**

 **HAVE FUN!!**

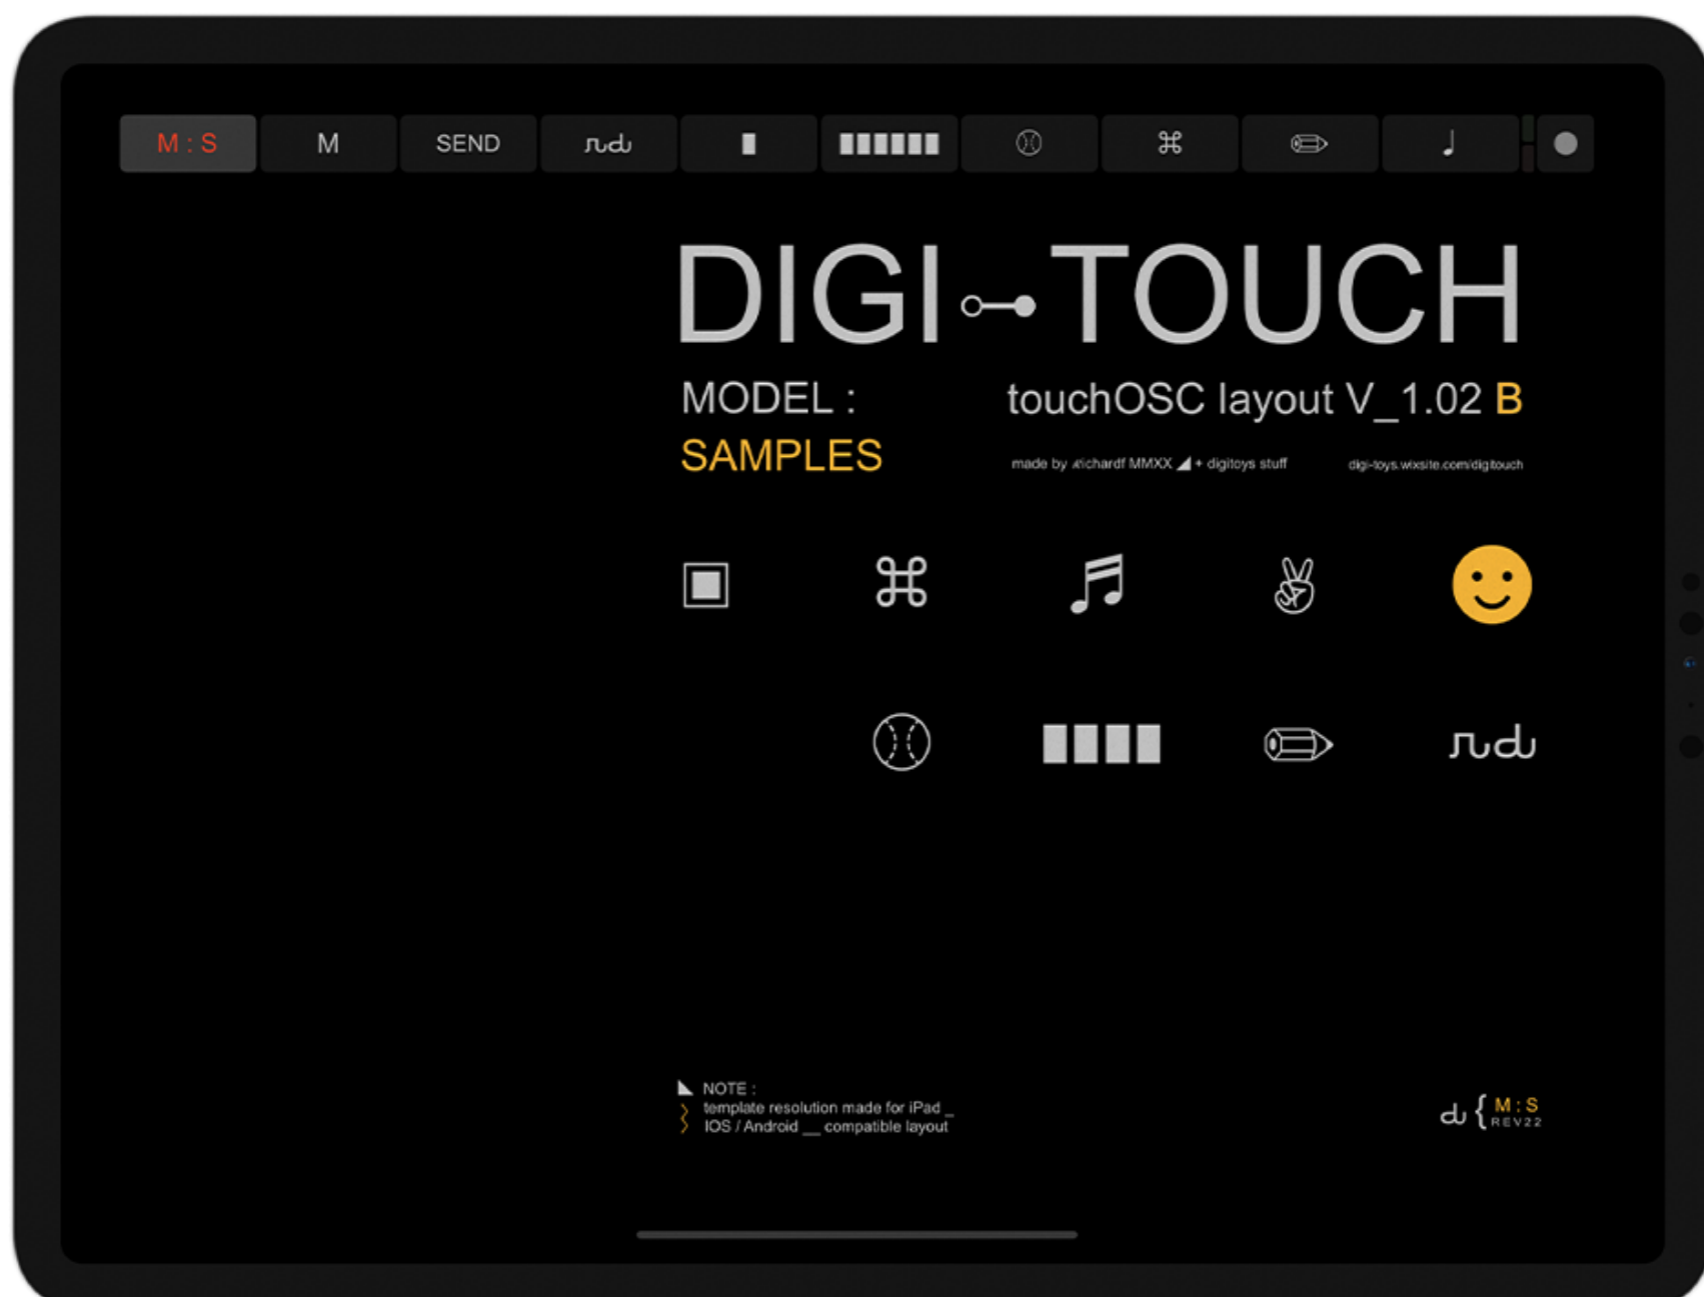


NO MIDI MESSAGES HERE

REV 03_4

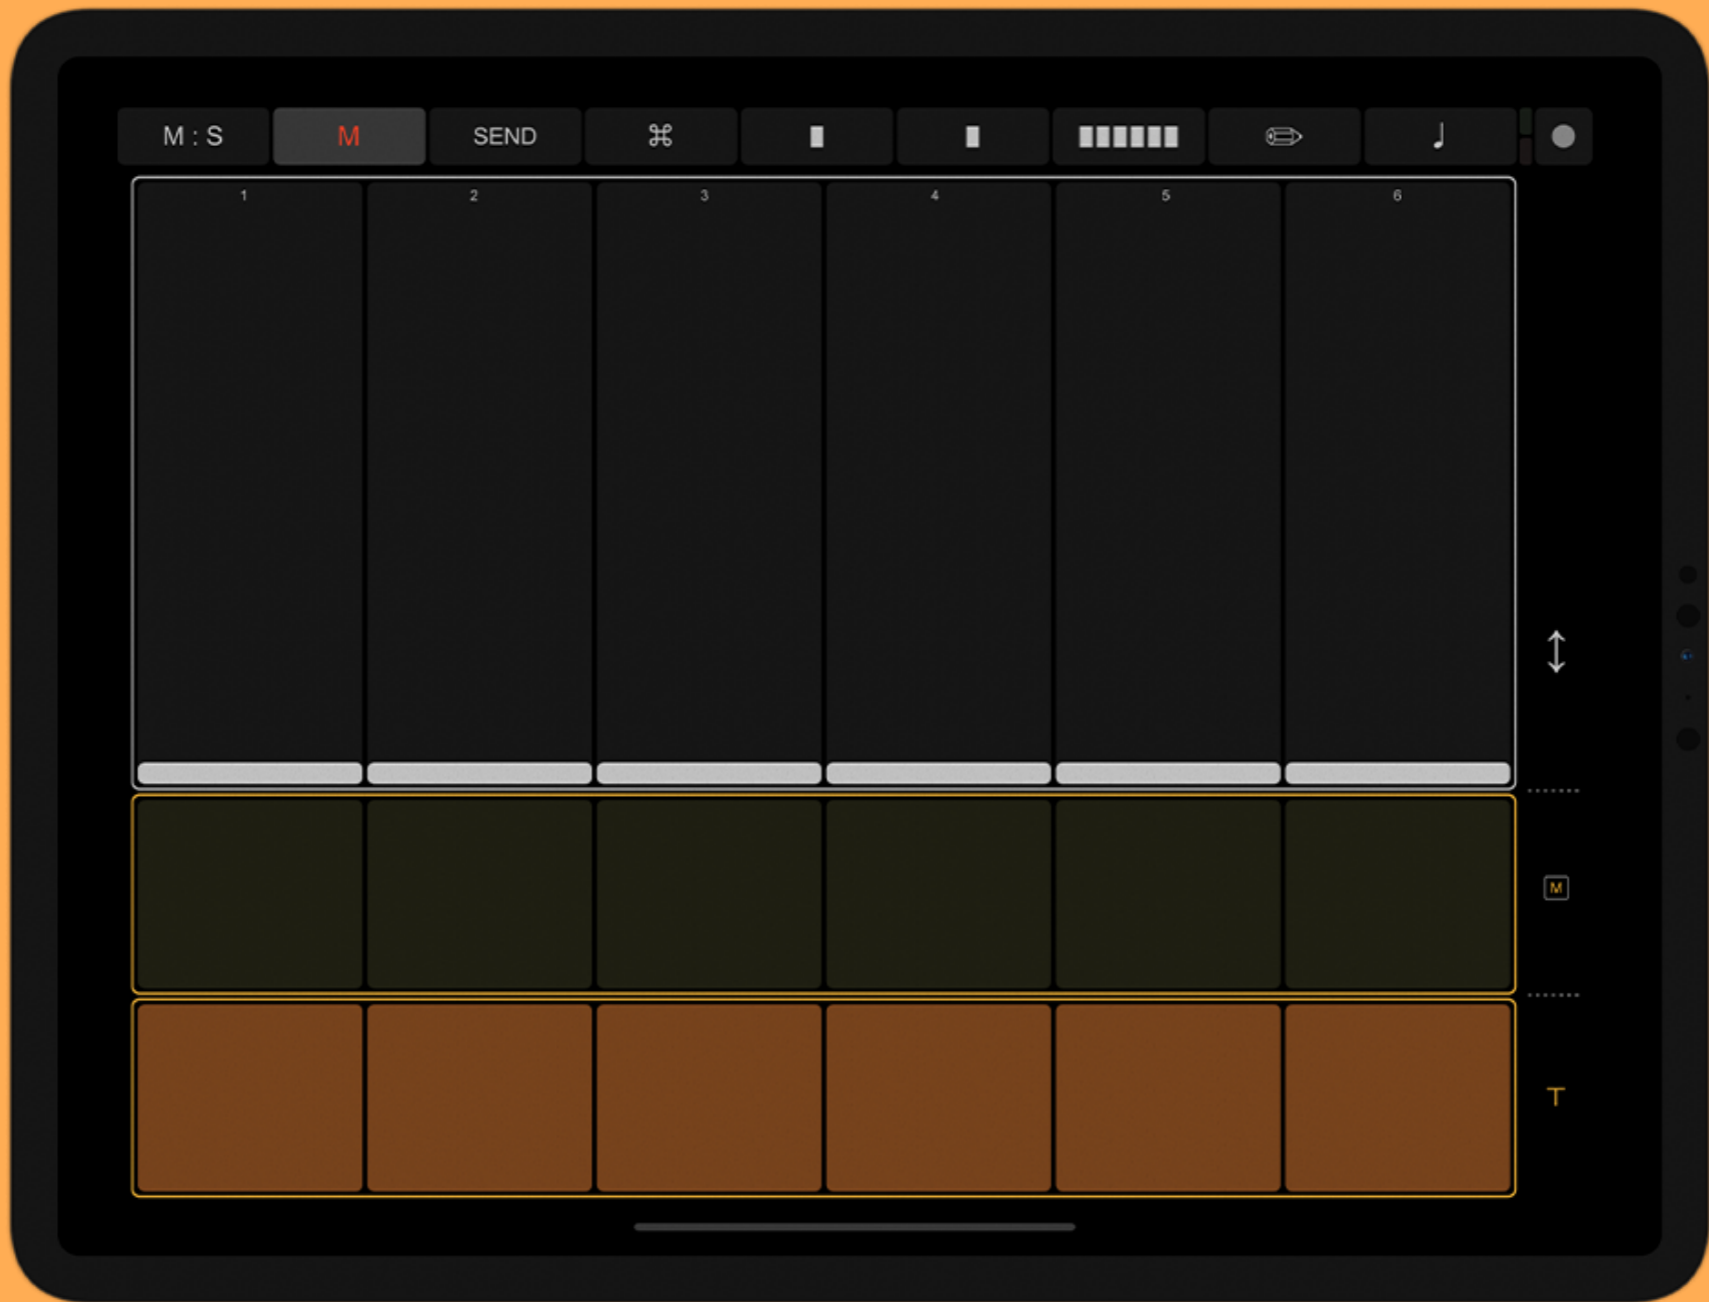


↑↓ = VOLUME TRACKS 1/6
 □ = MUTE TRACKS (1/6)

T = TRACK'S SAMPLE TRIG (1/6)

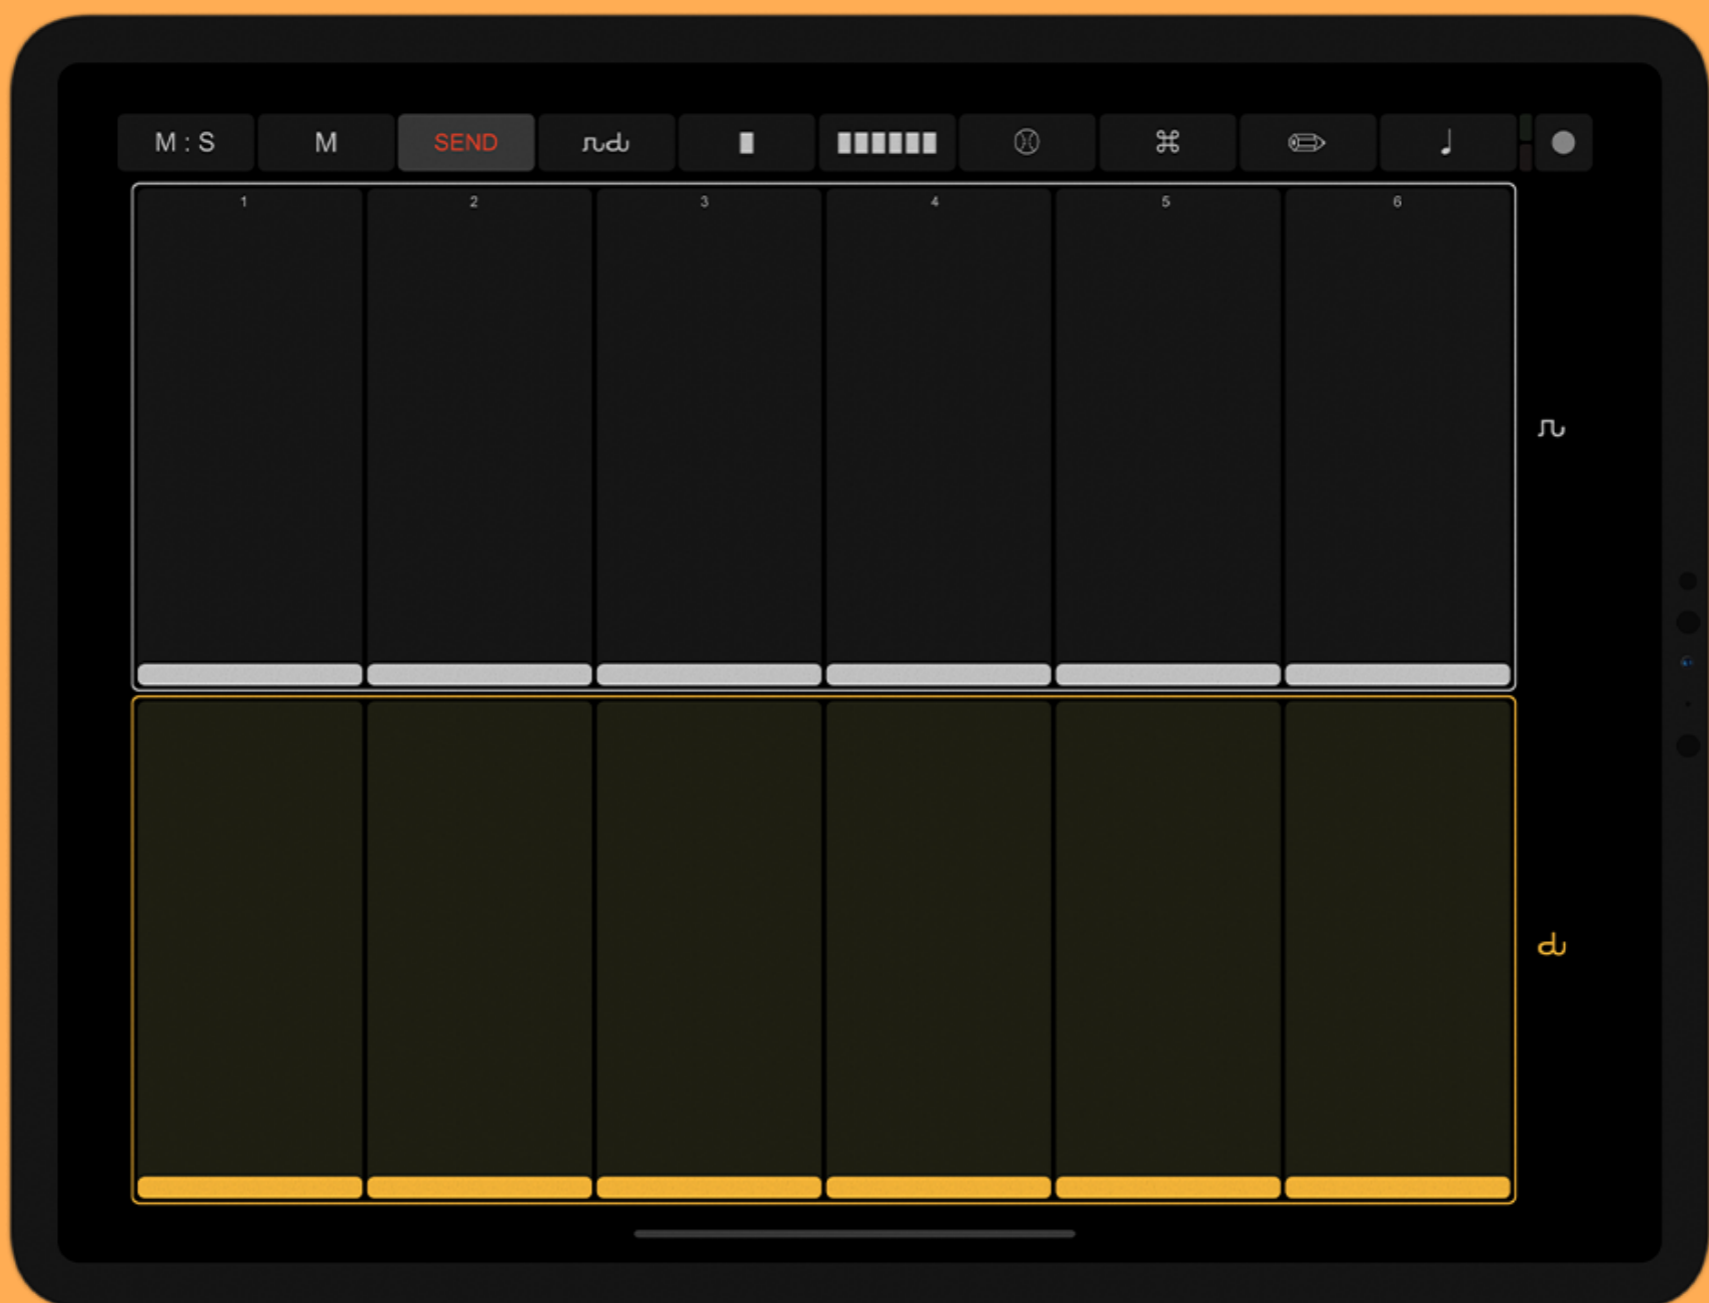

∩ REVERB SEND CHANNEL 1/6
 GRAY MODULES

du DELAY SEND CHANNEL 1/6
 YELLOW MODULES

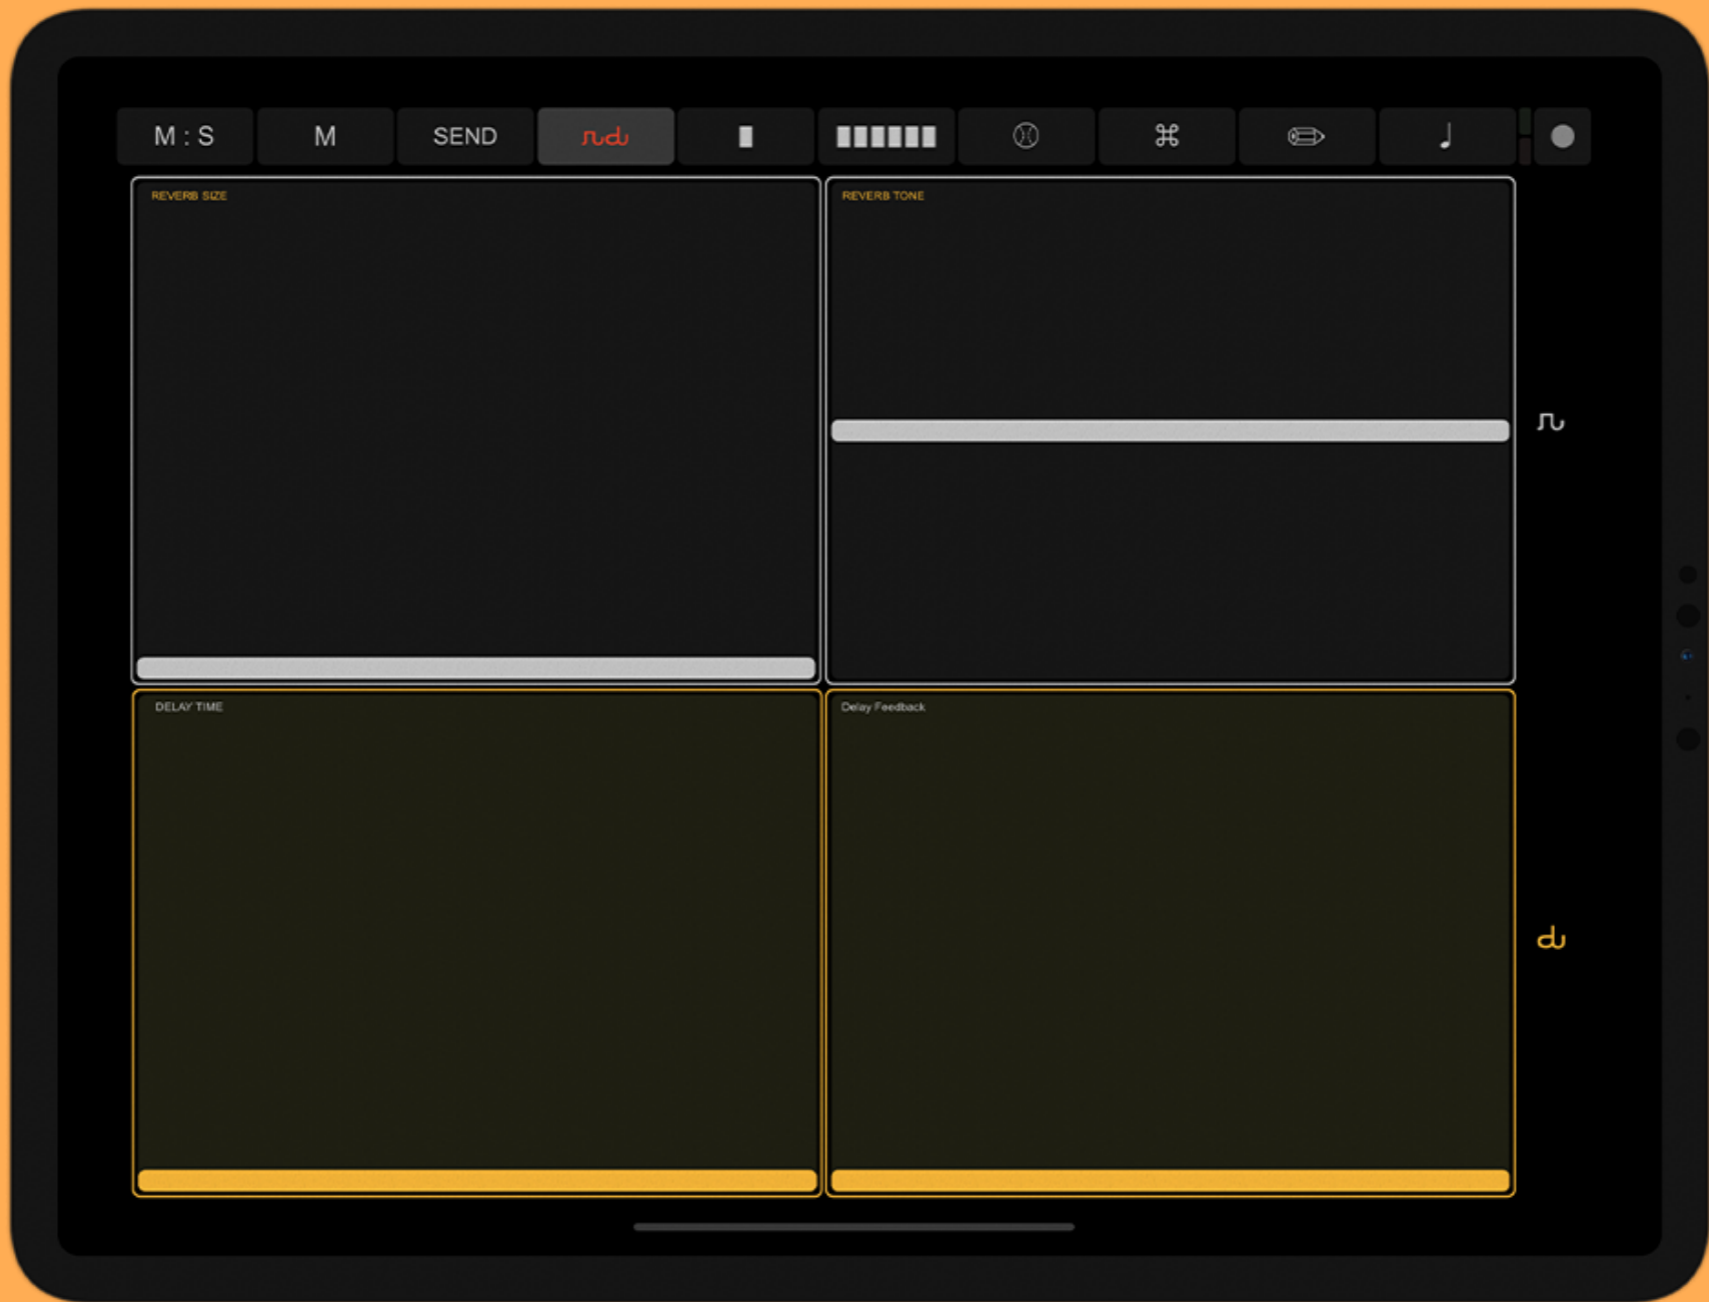

∩
REVERB SIZE - REVERB TONE

∪
DELAY TIME // DELAY FEEDBACK
CH7



PARAMETER PAGE 1 - TRACKS 1/6

PITCH / DECAY / SAMPLE START / SAMPLE LENGTH
CUTOFF / RESONANCE

■■■■
CC'S ORDER AS
ON THE DEVICE



PARAMETER PAGE 2 - TRACKS 116

LFO SPEED / VOLUME + DIST / NOTE * / PAN *^{NEW}
SWING / CHANGE




CC'S ORDER AS
ON THE DEVICE



LFO PARAMETER PAGE TRACK 116

WAVEFORM / MULTIPLIER / START PHASE /
DEPTH / FADE IN/OUT / DESTINATION / RESET



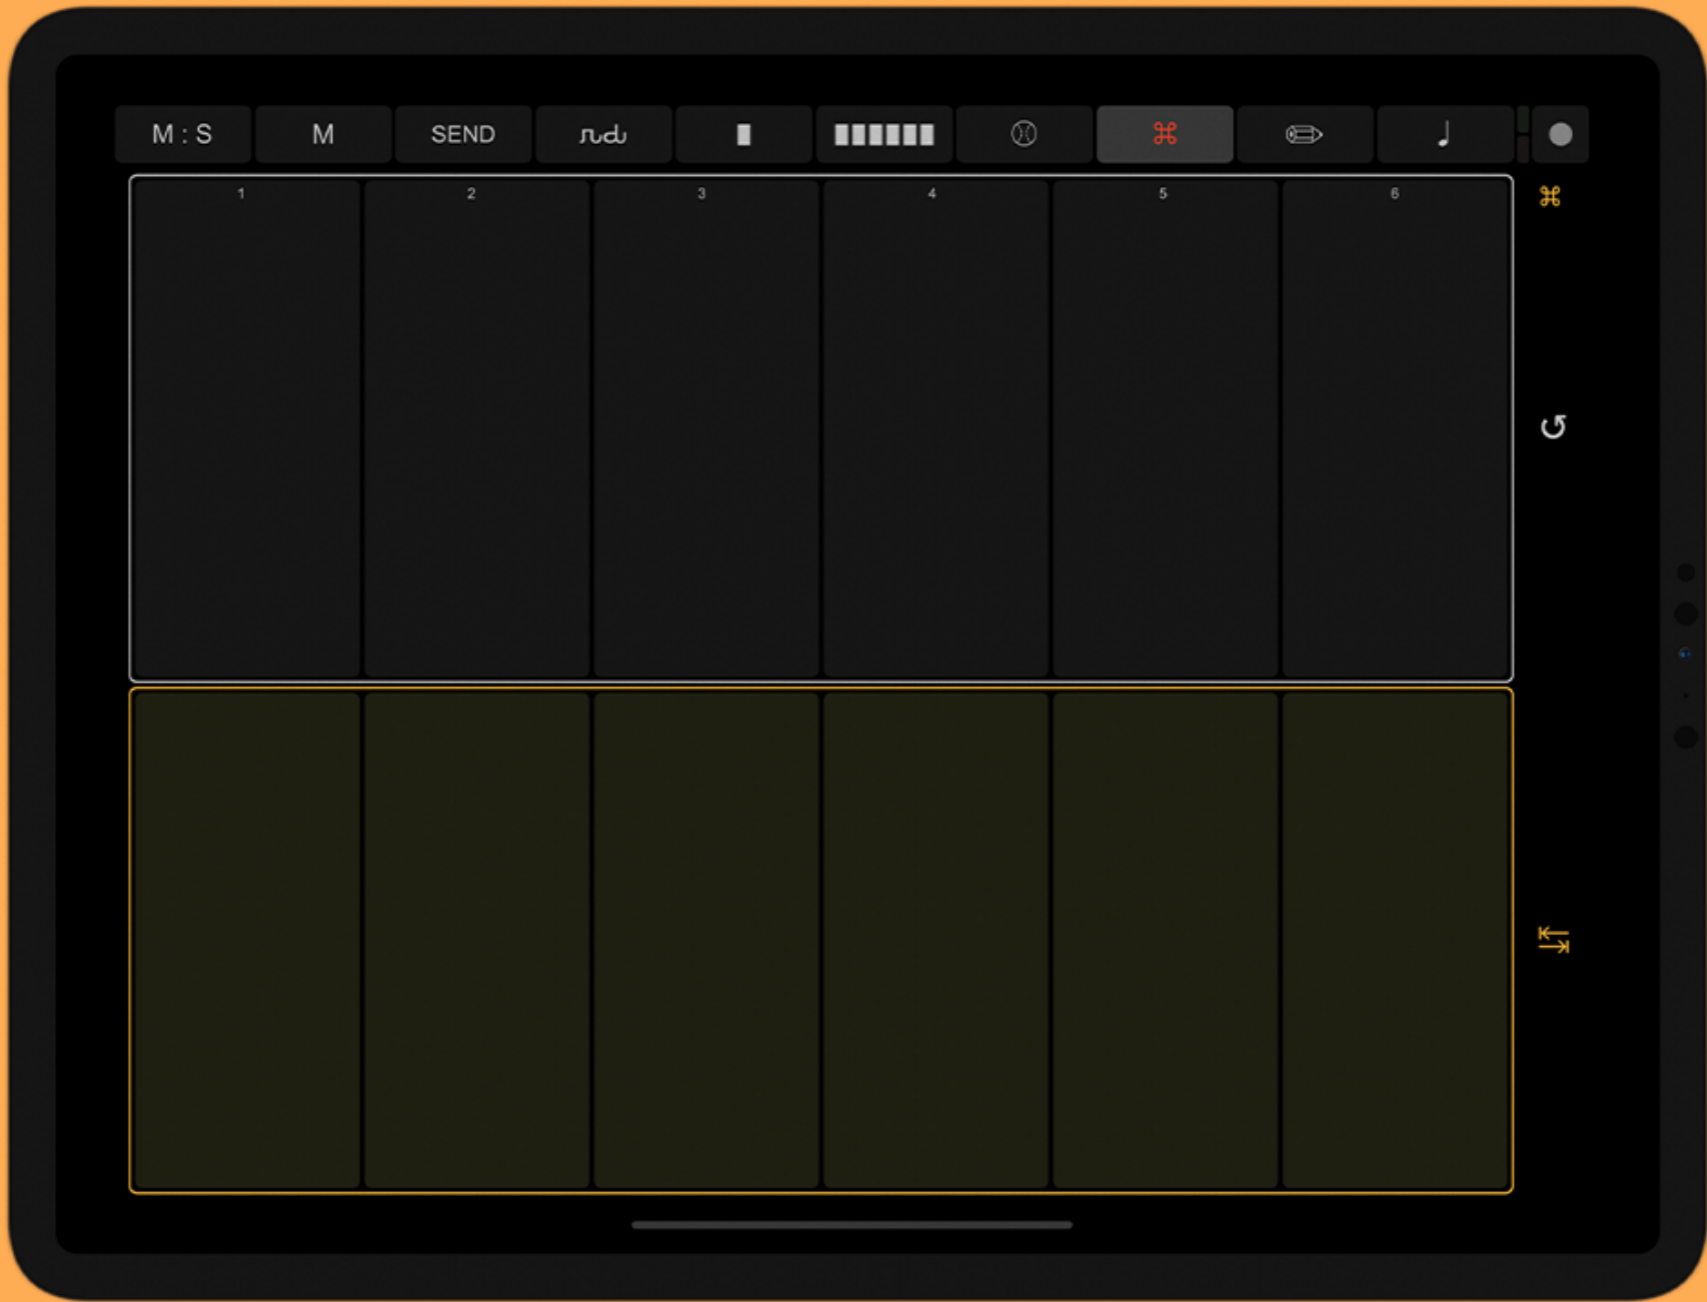

*LOOP
1/6*



REVERSE 1/6



PATTERN 1/96 (BANK A/F)





NOTE C - 1 / B 0

C + 1 / B + 2

AUTO

CH8





TIPS

SYNC THE LAYOUT WITH ITUNES (RECOMMENDED!) OR TOUCHOSC EDITOR - BUT THIS METHOD COULD CAUSE INCORRECTLY ICONS TO APPEAR!

- MODEL SAMPLES # MIDI SETTING :



1 →
T1 In ▶
1/9


T1 = CH MIDI 1
T2 = CH MIDI 2
T3 = CH MIDI 3
T4 = CH MIDI 4
T5 = CH MIDI 5
T6 = CH MIDI 6
FX = CH MIDI 7
AUTO IN = CH8



T1 = CH MIDI 1
T2 = CH MIDI 2
T3 = CH MIDI 3
T4 = CH MIDI 4
T5 = CH MIDI 5
T6 = CH MIDI 6
FX = CH MIDI 7



→ PCH IN = CH 9 - PCH OUT = CH 9 ↓ ⚠ (PLEASE SET PCH OUT = OFF -
→ PCH IN = ON - PCH OUT = OFF AT THE MOMENT IS NOT POSSIBLE TO RECEIVE PROGRAM CHANGES BUT ONLY TO SELECT THEM FROM THE M+S LAYOUT)

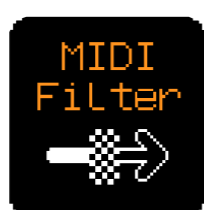

ON
Rcv Note▶
1/3


RCV NOTE = ON
RCV CC = ON
ENCS = I+E

⚠ 8.4.2 MOUT (MANUAL)


ACTIVATE THE MOUT FOR EACH TRACK
OR CHECK IF IT'S ACTIVE!



M+U
Inp from▶
1/4

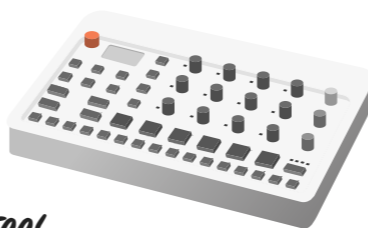

*USB IS FINE TOO!

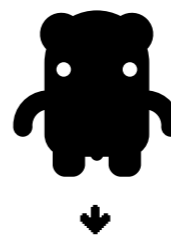

ASK US FOR INFO/ QUESTION AND TIPS!

<https://gumroad.com/digitouch>

<https://digitouch.threadless.com>



DIGI-TOYS-WIXSITE.COM/DIGITOUCH
IDEA AND DESIGN BY RICHARDF
2019 / MMXX

